

App Setup

RIR3000 | RIR2000

ambe[®]

STEP 1

Download the SunKare Heating App

Scan the QR code to download the app or search 'SunKare Heating' on the App Store (iOS) or Google Play (Android)



STEP 2

Connect your mobile device to your heater




Make sure there is power to your heater but the heater should be **off**. There will be a visible **blue** light on the heater.

In your mobile settings, turn your Bluetooth on and search for devices.

While your mobile is searching for devices, **Press** and **Hold** the **On** button on the supplied heater remote. The light on the heater will turn **Red**. Keep holding the remote **On** button until the heater '**AMBE Heater**' shows up on your mobile. This can take up to 30 seconds.

Once it appears, select the heater from the devices list and pair with your mobile. The light will then turn **Purple**. The heater light stays purple when paired with your phone.

Heater light indicators

-  Bluetooth not connected
-  Searching for Bluetooth
-  Bluetooth connected




STEP 3

Open the SunKare Heating App

Open the App and **select 'Heaters'** on the bottom right corner. It may take a few seconds for your heater to appear on the list. Once it appears, select the heater from the list.

You will be asked to create an **8-digit passcode**.

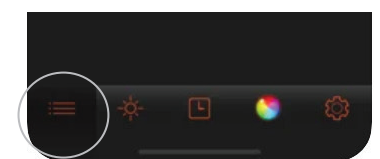

Heaters

STEP 4

Setup complete

You can now operate the heater from your mobile by turning it off and on, and adjusting the heat level.

The heater will drop off the heaters list, and heater light turn **Blue** when you are out of Bluetooth range.

